

NORAMCO FITNESS

13901 Highway 105 West
Conroe, TX 77304


www.NoramcoFitness.com

How to Access the Inside of the Display Panel Treadmill Serial Numbers 10910 or higher

If you have any problems or questions, please call our technical support line: 800.827.2017

Before beginning any service on the inside of the display, be sure the treadmill is unplugged.

- ❑ First remove the four Allen bolts on the top edge of the display.

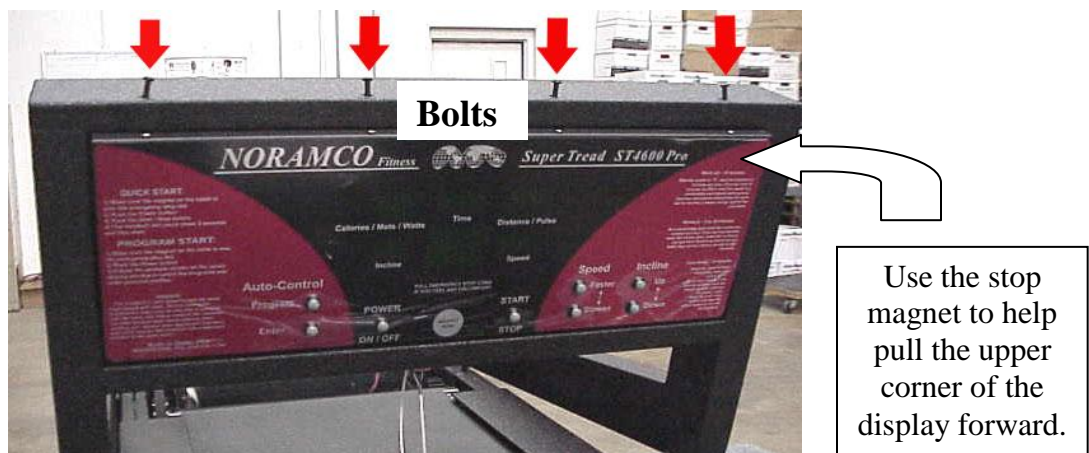

- ❑ Use a small flat-blade screwdriver, or a similar tool with a strong flat edge, to pry the display insert out of the display upright. Tip the display insert forward, being careful not to jerk the green ground wire that connects the display insert to the inside of the display upright.

